

# Section 5: Option Summary



## SET-UP FOR A/C OPERATION WITH REVERSE MIRROR READ

To enter into the options hold the **LEFT** button during power up. At the end of the countdown the display will display "OPTION". Once in options, **LEFT** will cycle through the option numbers 0 through 20. The **RIGHT** button will toggle between On/Off for some options and will enter into an advanced menu for more complicated options. See specific options in Section 6 for more advanced option descriptions. Pressing **LEARN** at any time will save the settings and reset the display. To restore to factory default, press both the **LEFT** and **RIGHT** button simultaneously.

#	Name		Description for "ON" Value
0	Reset		Resets all settings to factory defaults
1	Version		Displays the current software version
2	Toledo / Fairbanks		Decodes Toledo / Fairbanks status bytes
3	Timeout Length		Maximum time allowed between data transmissions Default = 5 seconds
4	On Demand		Updates display when a Print button is pressed Turn ON if transmissions are more than 2 sec. apart
5	No Data		Set to display "nodata", to blank or to retain the last value when not receiving data
6	Fixed Decimal		Sets a fixed decimal point position
7	No Count Down		Does not count down on startup
8	No 0 Suppression		Does not suppress leading 0's
9	Alpha		Will display alpha and numeric characters
10	Mirror	set to 01	Displays data to be seen in a rearview mirror
11	Addressable		Makes the display addressable
12	No Auto Shift		Disable auto shifting while learning
13	Shift		Set or view the shift value
14	Baud Rate		Set or view the baud rate
15	End Character		Set or view the end character
16	Minimum Weight		Sets the minimum weight to display
17	Maximum Weight		Sets the maximum weight to display
18	Blank Out Character 1		Sets a character to cause the scoreboard to blank
19	Blank Out Character 2		Sets a character to cause the scoreboard to blank
20	Blank Out Character 3		Sets a character to cause the scoreboard to blank
21	Red Stoptlight	set to 82	See Section 7
22	Green Stoptlight	set to 71	See Section 7
23	Toledo High Speed		Display annunciators for grams and ounces
24	Fairbanks Addressable		Addressable for Fairbanks 40-41
25	Fixed Annunciators		Choose the LB/KB and GR/NT annunciators indicated regardless of data stream
26	Demo Mode		Cycle through different weights as a demo
27	Intensity		Set the intensity low (off) or high (on)
28	Siemens		Use a Siemens BW500 Modbus Protocol